

MOTORCYCLE

# THERMO DELIVERY BAG INSTRUCTIONS

Please read instructions carefully and retain for future reference.

Failure to follow the instructions in this guide may result in damage of the motorcycle and / or personal injury.

It is the user's responsibility to ensure the delivery bag and fitting plate are routinely inspected to ensure it is secure and stable.

Caution should be made to avoid over-loading the delivery bag which may result in abnormal handing of the scooter / motorcycle

Insulated food delivery carry bag can be used for the take away industry or personal use. Will store food containers & pizza boxes, has 4 x S hooks for plastic carry bags for storing drinks etc. Each bag is insulated with a foam lining and a strong foil inner fabric which can be easily wiped clean after ever use.

## PRODUCT CONTENTS


- 1. Delivery Bag (1pc)
- 2. Internal Plastic Frame (20pcs)
- 3. Internal Velcro Divider (1pc)
- 4. Internal Hard Base (1pc)
- 5. Metal Fitting Plate (1pc)
- 6. S Hooks (4pcs)
- 7. Zip Ties (6pcs)










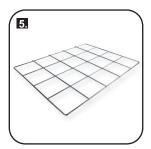







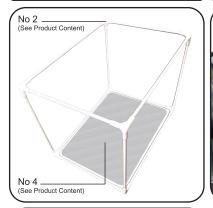

Build the internal plastic frame and then make sure the internal hard base are fitted inside the bag.

Plastic frame consists of 8 x corner connectors, 4 x uprights, 4 x long length & 4 x width lenght (Total of 20pcs)


#### STEP 2



Use the small velcro straps within the bag to secure the plastic frame too.

Internal velcro divider helps to separate hot and cold items and can be removed with the velcro for larger items.

# STEP 3

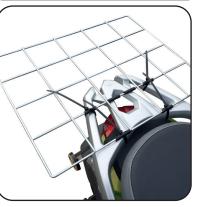

### STEP 4



Attach universal fitting plate to rear of carrier (recommended) with the zip ties provided (Colour may vary).

Once secure trim zip ties down so not to damage the underneath of bag.

Removable shoulder strap when in transit.

Now the universal fitting plate has been fitted place the bag on the fitting plate and use the 4 x web buckle straps to secure the bag by looping under the fitting plate and then back up on the outside of fitting plate and clip in place. Adjust the straps to hold in place (Please make sure to do this on both sides of the bag).

The bag is now ready to use.